

ECL101







Table of Contents

1	APPROVALS AND SAFETY CONSIDERATIONS	3
2	HELPFUL TECHNICAL SUPPORT DOCUMENTS ONLINE	3
3	ECL101 DESCRIPTION	4
4	PROBE MOUNTING	4
5	EXTENSION CABLES	4
6	RANGE LED OPERATION	4
7	ZEROING THE OUTPUT	4
8	REMOTE ZERO	5
9	SYNCHRONIZED SYSTEM	5
10	FIELD CALIBRATION	5
11	DRIVER CONNECTIONS	6
12	SPECIFICATIONS	6



1 Approvals and safety considerations

The ECL101 is compliant with the following CE directives:

Safety: 61010-1:2001

EMC: 61326-1, 61326-2-3

To maintain compliance with these standards, the following operating conditions must be maintained:

- All I/O connecting cables must be less than three meters in length
- AC power cables must be rated at a minimum of 250 V and 5 A
- AC power must be connected to a grounded mains outlet rated less than 2 0A
- Use the included CE approved power supply. If an alternative power supply is used, it must have equivalent CE certification and provide safety isolation from the mains according to IEC60950 or 61010.
- Sensors must not be attached to parts operating at hazardous voltages in excess of 30VRMS or 60VDC
- All external connections must be SELV (Safety Extra Low Voltage). Use of the equipment in any other manner may impair the safety and EMI protections of the equipment.

2 Helpful Technical Support Documents Online

The IBS Precision Engineering's website has a large selection of technical documents (TechNotes and Application Notes) in the Technical Library. These documents provide detailed descriptions of the operation and use of the products of IBS Precision Engineering.

The Technical Library can be accessed at:

https://www.ibspe.com/expertise/technical-resources

Some of the titles include:

- Understanding Capacitive and Inductive Sensors
- Comparing Capacitive and Inductive Sensors
- Z-height Measurement with Non-contact Sensors
- Sensor Operation and Optimization
- Using Capacitive Sensors in Vacuum Applications
- Understanding Electrical Runout When Using an Eddy-Current Sensor for Roundness Measurements
- Inductive Probe Cabling Considerations




3 ECL101 Description


The ECL101 displacement sensor consists of a probe with integral coaxial cable and a driver which operates on 12-24V DC and produces a 0-10 VDC output which are linearly proportional to the distance between the probe and the target being sensed.

4 Probe mounting

Probes must be mounted to avoid interaction with the mounting hardware and interaction between adjacent probe fields. The distance between multiple probes must be at least 3 probe diameters. The area within 3 probe diameters to the sides and 1.5 diameters behind should be kept clear of adjacent probes or any metallic objects other than the object to be measured.

If this is not possible, field calibration may be required.

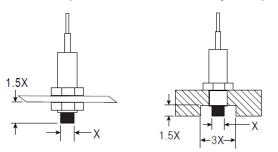

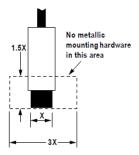

5 Extension cables


If a probe extension cable is included, the sensor is calibrated with the extension cable attached. Operating the sensor without the extension cable may cause inaccurate results.

6 Range LED operation

Dual color LEDs indicate the relative position of the target as shown at right. One LED is illuminated whenever power is applied.

7 Zeroing the output

The sensor is factory calibrated to produce an output of zero volts when the probe is at the Near Gap (nearest calibrated point) and the front panel Zero adjustment is at the center of its adjustment range. The front-panel Zero provides a ± 0.5 V DC shift to theoutput.

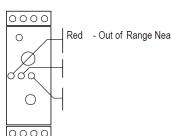



8 Remote Zero

The output voltage can also be shifted by applying ±10 V to the Remote Zero input. Positive voltage input shifts the output in a positive direction.

Note: Noise / ripple on the Remote Zero voltage will appear in the analog output.

9 Synchronized system

Sensor measuring the same target should be synchronized unless the sensors are too far apart to make it practical. Short coax interconnecting cables are provided with synchronized drivers. The cables interconnect the Sync connectors on the faces of the drivers. Do not use a T-connector on the Master Driver, identified with an "M" label. Slaves are identified with an "S" (formerly Primary "P" and Secondary "S").

10 Field calibration

Adjustments accessed from the bottom of the enclosure allow for field calibration. Any change in these adjustments will void the NIST traceable calibration certificate shipped with the sensor.

These instructions are for recalibration to the original range as shipped from the factory. Calibration to a significantly different range and/or offset will adversely affect the range LEDs operation, and temperature and resolution specifications.

A suitably precise method to accurately adjust the probe/target gap is required for calibration.

- 1. Position the front panel Zero adjustment to the mid-point (25 turns in one direction, and 12 turns back will center the adjustment).
- 2. Set the probe/target gap to the minimum (offset).
- 3. Use the calibration Zero adjustment on the bottom of the device to set the output voltage to 0.00 VDC.
- 4. Position the probe/target gap to the mid-point of the range.
- 5. Use the calibration Gain (bottom of enclosure) to set the output to 5.00 VDC.
- 6. Position the probe/target gap to maximum.
- 7. Use the calibration Coarse or Fine Linearity (enclosure bottom) to set the output voltage to 10.00 VDC.
- 8. Repeat steps 2-7 until no further adjustments are needed (see hint below).


Hint: When adjusting linearity, adjust the output for the same but opposite amount of error voltage. For example, if the output is 9.950 VDC adjust it to 10.050 VDC. This will shorten the total number of iterations of steps 2-7.

As the linearity adjustment approaches 10 VDC, use Fine Linearity for finer control.



11 Driver connections

No connection			
Remote Zero	±10VDC input shifts output voltage. Noise or ripple on this voltage will appear in the output voltage.		
Ground	Internally connected to power input ground.		
VDC In	+12 to +24VDC @2W power input.		
	Input voltage ripple must be less than 40mV p-p to		
	maintain specifications.		
V Out	0-10VDC calibrated output. Actual output		
	voltage can range from –5 to +Vin when		
	probe is out of range.		
V Out Ground	Internally connected to power input ground.		
No Connection			
Ground	Internally connected to power input ground.		
Sync	Synchronization connection. Maximum of 1 master and 8 slaves.		

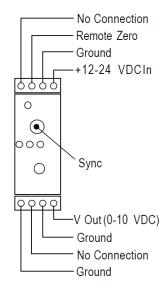

12 Specifications

Analog Output		0-10 VDC, 0 Ω,
		15 mA max
Resolution*		0.008% typical dependent on
		calibration
Linearity		0.05%
Probe Thermal Drift	at Mid-Range	±0.04%FS/°C
Input Power		12-24 VDC, 2 W
Remote Offset (Zero)		±10 VDC analog voltage
Driver Operating Environment		4°C to 50°C, IP40
Probe Operating	Standard Probes	-25°C to 125°C, IP67
Environment	High Temperature Probes	-25°C to 200°C, IP63

^{*} Specifications are based on Aluminium and/or 4140 Steel targets.

In high EMI environments (10 V/m) output level may shift and noise levels may rise to 50 mV RMS (0.5% resolution).